

# **AFIDA SA6000-0**



## Advanced Fuel Ignition Delay Analyser

ASTM D8183; IP 617; EN 17155

Correlates with ASTM D613; EN ISO 5165 & DIN 51773

Specifications ASTM D975; ASTM D1655; ASTM D6751; ASTM D7467; EN 590

- Indicated Cetane Number by CVCC
- Range 35 85 ICN
- Highly automated with auto sampler
- Reference Fuel Calibration
- No bias correction to engine values
- Excellent precision to minimise giveaway
- Easy to use, suitable for 24/7 operation
- Load and go





Middle Distillates • Biodiesel • FAME • Jet A1 • HVO • XTL



## AFIDA (Advanced Fuel Ignition Delay Analyser)



AFIDA is a revolutionary development providing fully automated determination of the Indicated Cetane Number (ICN) of diesel and diesel related fuels


The analyser incorporates a unique and patented high pressure injection system that generates fine fuel droplets similar to modern common rail injectors in most diesel engines.

A temperature controlled piezo electric injector provides rapid switching and highly repeatable fuel metering, offering improved performance and consistency when compared with solenoid controlled injectors and pintle type nozzles.

The analyser provides very fast, efficient and calibrated ICN determinations, tests are fully automated via an integral 36 position carousel and auto sampler.

# -Calibration Curve 70 N 60 45 40 6 6.5 Ignition Delay Time [ms]

Figure 1: Calibration with 7 PRF blends covering measurement range **ČN 85 to CN 35** 

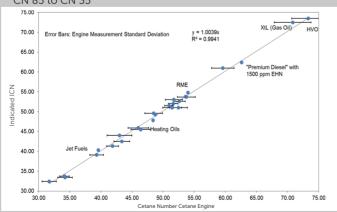

> Figure 2: ICN correlation to Cetane Engine - R<sup>2</sup> = 0.9941

#### **Features**

- Excellent correlation to ASTM D613, EN ISO 5165 & DIN 51773
- Integral 36 place carousel and auto sampler
- Calibrated with industry approved reference fuels
- Fully automated measurement
- Small sample volumes (approx 40 ml/analysis including flushing)
- Short analysis time of approximately 25 minutes per sample
- Precise and reproducible software controlled determination of
- Advanced electronically controlled high pressure fuel injection system with piezo electric injector
- Safe operation integral safety monitoring functions
- Results saved to PC or for download
- Proven calibration stability minimising downtime (see figure 3)
- Uninterruptable power supply to maintain cooling in the event of power failure



Sample Carousel



› Piezo Electric Injector

### **New Generation AFIDA Technology**

### Direct correlation to ASTM D613 (ISO 5165) engine tests

The traditional Cetane Engine methods establish an ignition delay period for the test fuel which is referenced to a primary reference fuel

Existing Constant Volume Combustion Chamber (CVCC) technology provides a Derived Cetane Number (DCN) result based on a historical averaged correlation equation applied to the ignition delay of the fuel sample.

The new generation AFIDA technology is a significant step forward as it uses the original Primary Reference Fuels as specified in the Cetane Engine method to provide a calibrated Cetane Number measurement (see figure 1). This approach eliminates the need for temperature tuning and uses fixed test conditions.

#### Standardisation by CEN, ASTM and the Energy Institute

An EI inter-laboratory study was successfully completed with excellent precision and concluded no bias correction to ASTM D613 (cetane engine).


ASTM D8183, IP 617 and EN 17155 have now been included in EN 590: ASTM D975: ASTM D6751: ASTM D7467: ASTM 1655

### **Indicated Cetane Number (ICN)**



### **Operating Sequence**


- Prior to the analysis each sample is filtered by the operator using a 0.45 µm filter
- Software controlled auto sampler selects the sample to be analysed
- System is cleaned automatically with the selected sample
- High pressure pump generates the injection pressure, while the heating tubes keep the fuel at a constant temperature
- Test sample is injected into the pressurised combustion chamber
- Nebulized fuel ignites spontaneously and leads to a pressure increase, see figure 4
- The pressure variation curve is recorded at high resolution by a dynamic pressure sensor
- ICN is read directly from the calibration curve, see figure 1

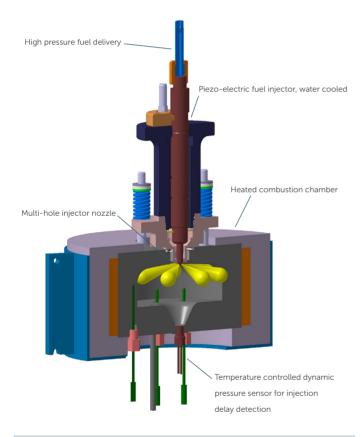

### High Pressure Pump (M)heated Tubing Return (PIC) Piezo Injector Fuel Samples Autosampler (TC)Chiller Sensor Combustion -(PIC) Exhaust Pressure Regulator

#### Features of the Chamber and Injector

- Fuel reservoir maintains high fuel pressure during injection
- Piezo-electric fuel injector as used in modern passenger cars' diesel engines
- Water-cooled injector jacket maintains constant fuel temperature during operation
- Effective nozzle tip cooling to avoid fuel degradation due to high temperatures
- Real internal chamber temperature measurement
- Pressure transmitter connection free of acoustic oscillation

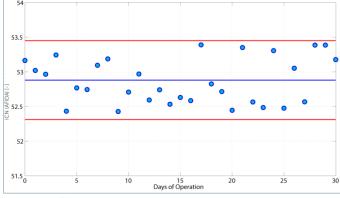

> Figure 3: ICN variation during operation time


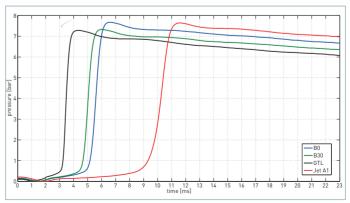



Figure 4: Pressure variation curves of four different fuels (B0, B30, GTL and Jet A1)




### AFIDA (Advanced Fuel Ignition Delay Analyser)

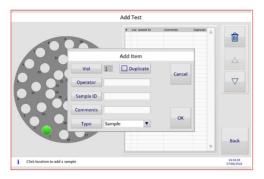

1. Place sample in carousel and select location

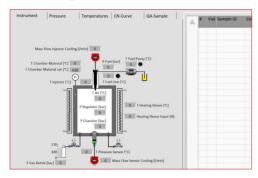

**3.** Monitor instrument status, pressure, temperature or CN curve during test

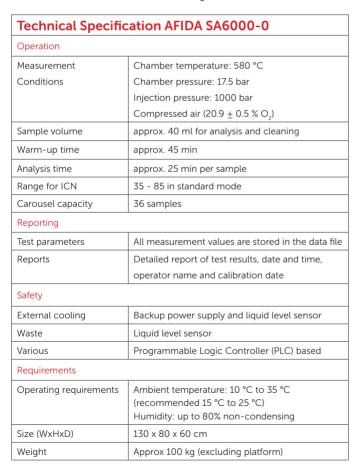

<sup>\*</sup>Manufactured under licence from ASG Analytik-Service Gesellschaft mbH




2. Select test sequence and press go



4. View results

### Best cross method Reproducibility to ASTM D613

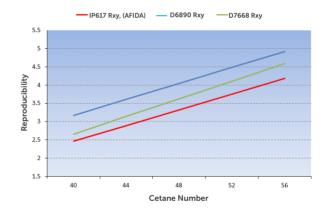

### Minimise giveaway - precision comparison

